

## INDCOOL WINDOW AIR CONDITIONER

Power Supply: 1 Phase, 230V - AC, 50Hz



Thank you for selecting  
Indcool Window Air Conditioner

**BEFORE OPERATING THIS PRODUCT, PLEASE READ AND FOLLOW THE INSTRUCTIONS IN THIS MANUAL.**

\*Actual product may differ from the picture shown.\*



## E-WASTE MANAGEMENT (DISPOSAL POLICY)



This crossed waste bin symbol indicates that at the end of the life span, the product must be disposed separately from other electronics or household waste. Disposing off this product correctly will help save valuable resources and prevent any potential negative effect on human health and the environment, which could otherwise arise from inappropriate waste handling.

For proper treatment, recoveries, recycling, etc., this product needs to be taken to the designated collection points, where they will be accepted on a free of charge basis. Alternatively, user can also return the product to indcool Stores on the purchase of a new product.

Improper disposal of this product by the user involves the application of administrative penalties provided by law. Please contact indcool Customer Care at 1800-119-515 for further details on your nearest designated collection point.

### **PRODUCT PACKAGING**

*Product packaging has the purpose of protecting an appliance from damage that might occur during transportation. The materials used for packaging are recyclable and are selected on the basis of respect for the environment and ease of disposal, with an aim of material reintegration to the production cycles. This mechanism not only allows reduction of the volume of waste but also makes a more rational usage of non-renewable resources possible.*

## PRODUCT FEATURES

- 100% Copper Condenser
- High Energy Efficient Rotary Compressor
- Cool, Dry, Fan & Turbo Mode
- Sleep & Energy Saver Mode
- 3 Speed FAN with Auto Swing
- Blue Hydrophilic Coated Evaporator Fins

## PACKAGE CONTENTS

The package contains the items mentioned below. In case any of these components are missing, contact indcool Customer Care at 1800119515 immediately.


- |                   |      |
|-------------------|------|
| 1. Window Unit    | - 1N |
| 2. Remote Control | - 1N |
| 3. User Manual    | - 1N |

# INSTRUCTIONS TO USERS

Please read the following instructions carefully prior to the use of your air conditioner so as to ensure proper operation.


## INSTRUCTIONS FOR INSTALLATION

Please contact indcool Customer Care at 1800-119-515 to arrange for installation of the unit.

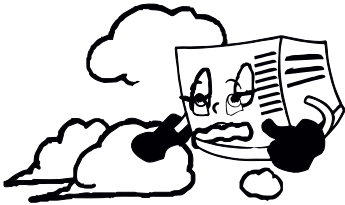


The units are not to be installed at places where there might be leakage of combustible gases.

In case that the leaked gas accumulates around the unit, accidents or fire hazards might occur.

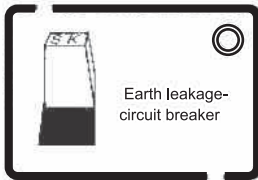

Make sure that the Earth Leakage Circuit Breaker of 30mA is installed.


Absence of Earth Leakage Circuit Breaker may lead to electric shock or other hazards.

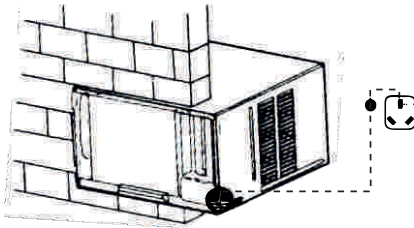

Make sure that the air conditioner is properly grounded.

The grounding wire on the air conditioner should be tightly connected to the ground of the power source. Improper grounding may cause electric shocks or other hazards.

## INSTRUCTIONS FOR OPERATION

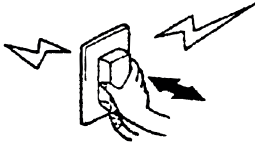


Never try to stop the operation of the air conditioner by pulling out the power supply line. Such performance might cause electric shocks or fire hazards.



Do not connect the power supply line to an intermediate connector. Use of prolonged power line is strictly forbidden. Nor is it allowed to share the same plug connector with other electric appliance.

It might cause electric shocks. Overheating, fire hazards or other accidents.

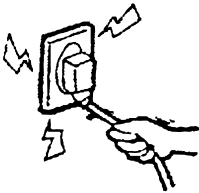


Do not press, stretch, damage, heat or modify the power line.

It might cause electric shocks, overheating, fire hazards etc. If the power line is damaged or needs to be replaced due to some other reasons, please make sure to have dealer or the authorized maintenance people to do the replacement.




Do not operate the switch by wet hands. It might cause electric shocks.

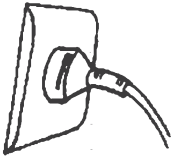

Before the connector is placed in, please make sure that there is no dust on it and that it is plugged fully in place.

If there is dust on the plug or if the plug is not in place, it might cause electric shocks or fire hazards.

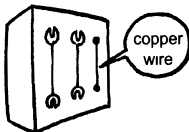


Never use the fuse with incorrect capacity or any other metal wires.

The use of metal or copper wires for fuse might cause operational failures or fire hazards.


*\*Strict compliance by the user of the above instructions shall help in preventing accident, injury and/or death, loss, damage to the user and unit.*



 
Do not place insecticides or paints and other flammable sprays near the air conditioner, or spray them directly at the air conditioner.  
It might cause fire hazards.



 Try to avoid the sunlight and hot air from entering the room. During the cooling operation, curtains or window-blinds should be used to shade off the sunlight.



 Prior to maintenance of the air conditioner, please cut off the power supply first.



Do not insert sticks or bars into the air vents. As the fan is in high speed operation, the insertion might lead to accidents.



Adjust the air direction correctly. Properly adjust the up/down and left/right directions of the air flow so as to get even room temperature.



Do not expose the body to cool air for long time. it might cause discomforts on the body, which is harmful to your health.




Do not clean the air conditioner with water. it might cause electric shock.



Do not attach, hang or stack articles on the air conditioner. it might lead to the railing down of the air conditioner unit, which will result in accident or injury.




Check the supporting structure or the units carefully. In case of damages, the supporting structures should be immediately repaired so as to avoid falling down or the unit, which might cause human injuries or other accidents.

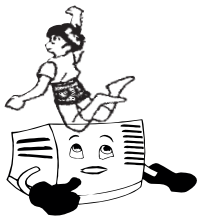

Do not sit on the unit or place any objects on it. The falling down of the unit or the objects might cause human injuries and other accidents.



Do not use the following substances:  
Hot water (over 40°C). The use of hot water will deform the air conditioner or make it fade in color. Gasoline, paint diluents, benzene and polishing agents etc. These substances will deform the air conditioner or cause scratches.

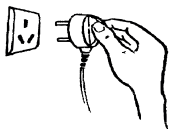

Pull out the plug when the unit is not in use for a long time. when the plug is to be pulled out, make sure that the switch at the air conditioner is turned on.

**WARNING:** Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.

1. The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater)
2. Do not pierce or burn.
3. Appliance shall be stored in a well -ventilated area where the room size corresponds to the room area as specific for operation.
4. Be aware that refrigerants may not contain an odour.

**NOTE:** Clause 1 to 4 are required for the units adopt R32/R290 Refrigerant.

**WARNING:** This symbol shows that this appliance used a flammable refrigerant. If the refrigerant is leaked and exposed to an external ignition source, there is a risk of fire.

- When removal or repair is needed, please contact authorized indcool representative at 1800-119-515
- In case of any abnormal occurrence (smell of burning), please stop the operation at once, cut off the power supply and contact the authorized indcool representative.

*\*Strict compliance by the user of the above instructions shall help in preventing accident, injury and/or death, loss, damage to the user and unit.*

# ABOUT YOUR INDCOOL UNIT



## SOME SUGGESTIONS

- a) This Unit is normally installed through a wall. During installation you will be removing the unit's chassis from the cabinet casing, installing the cabinet first and then re-inserting the chassis.  
**CAUTION:** COIL FINS ON CHASSIS ARE SHARP AND CHASSIS IS HEAVY.
- b) Make sure that wall mounting area is structurally sound enough to support the unit.

## ELECTRICAL CHECKS

- a) All wiring must comply with local and national electrical codes. All wiring must be installed by qualified and skilled electricians.
- b) Check the available power supply and resolve household wiring problems before installing and operating this unit.
- c) An individual branch circuit and single wall receptacle used only for this appliance, is required. This circuit must have a short-circuit protection.
- d) For your safety and protection, this unit is grounded through the service cord plug when plugged into a matching wall outlet. If you have any question whether your wall outlet is grounded or not, please consult a qualified electrician. DO NOT use adaptors or extension cords.
- e) The unit model and serial numbers can be found on the nameplate. Record your unit's serial number on the front of this manual for reference.

## CAUTION:

The manufacturer strongly recommends using at least two people during installation of unit.

**Note:** *In summer, condensation (water) from the rear of the unit is normal during cooling operation under high humidity weather conditions, therefore the unit should be installed where condensation run-off will not drip on pedestrians or neighbouring properties.*



# WINDOW ROOM AIR CONDITIONER MODELS

## ECONOMIC TIPS:

Select thermostat setting that suits your comfort needs and leave thermostat at that chosen setting.


Clean the Pre-Filter regularly. Normally Air Filter should be cleaned every three to four weeks or as required. Filter is very efficient in removing airborne particles. More frequent cleaning may be necessary depending on outside and inside air quality.

Comfort zone for humans is 24-27°C, hence to conserve electricity and for comfort conditioning, air conditioner should be used between 24-27°C.

## TECHNICAL SPECIFICATIONS

Model	Unit	IDCACW18K3F	IDCACW18K5F
Capacity	Ton	1.5	1.5
Star rating	Star	3	5
Nominal Cooling Capacity	Watt	5200	5160
Nominal current cooling	Amps	7.2	6.3
Nominal Power Input-cooling	Watt	1650	1460
Rated ISEER	W/W	3.15	3.53
Power supply	VAC/Hz/Ph	230/50/1	230/50/1
Noise Level	DB	54	54
Operation	Remote	Yes	Yes
Compressor Type	Rotary	Rotary	Rotary
Refrigerant	Type	R-32	R-32
Refrigerant quantity	Gm	550	550
Dimension (WxDxH)	mm	660/770/430	660/770/430
Net/Gross weight	Kg	54/59	55/60

# IDENTIFICATION OF PARTS

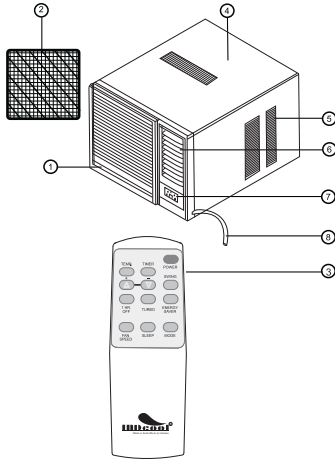

1. Front panel
2. Air filter
3. Remote control
4. Cabinet
5. Air inlet grill (outdoor side)
6. Air outlet grill
7. Electronic control keypad
8. Power supply cord

1. Power cord conductors are distinguished according to color as follows (shown in Fig.1).
2. For your safety and protection, this unit is earthed through the power cord (shown in Fig.1).  
Please contact the manufacturer or its service dealer or a similarly qualified person if you want to replace it.
3. This unit is earthed through the power cord.  
The wall outlet should be provided with reliable earth wire (shown in Fig.2).
4. The unit should be provided with an individual circuit and the circuit breaker/fuse rating should be the same as that of the power cord and wall outlet.

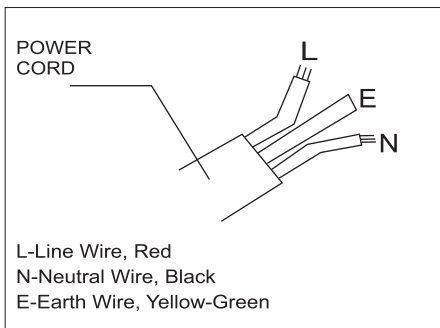


Fig.1



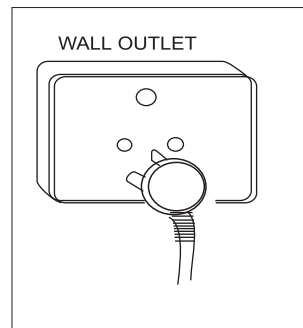


Fig.2

# DISPLAY PANEL

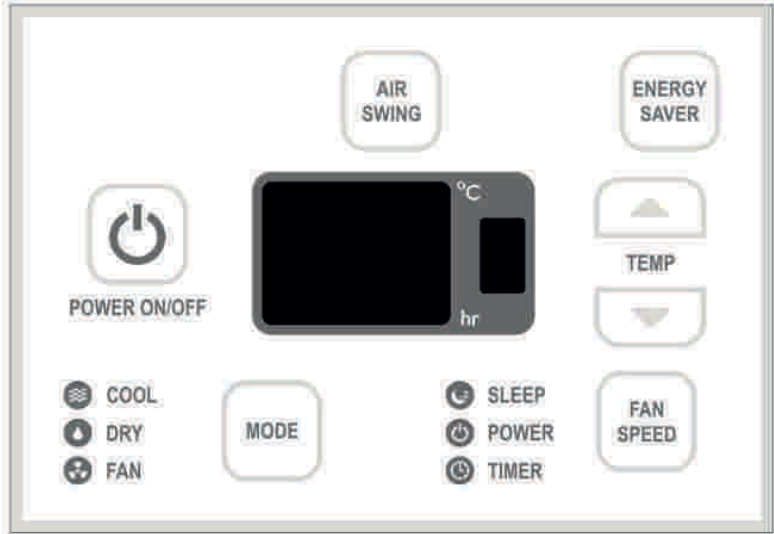


# REMOTE CONTROL

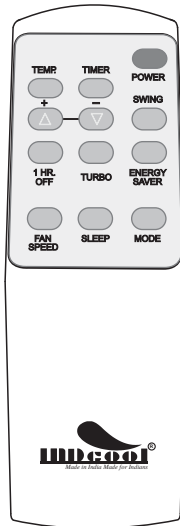

Display content or position may be different from above graphics, please refer to actual products.

# BUTTONS ON REMOTE CONTROLLER

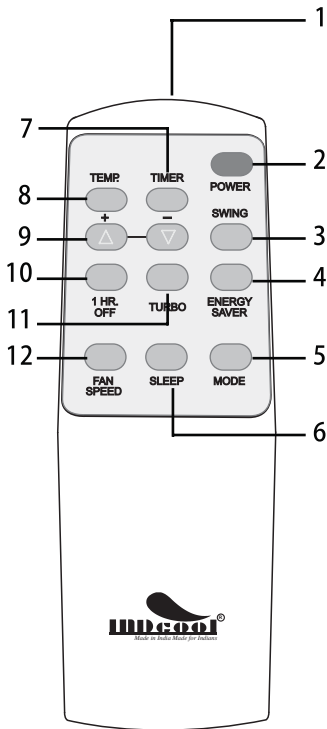

1. Signal Transmitter
2. Power ON/OFF Button
3. Swing Louver Button
4. Energy Saver Button
5. Mode Button: Fan/Cool/Dry
6. Sleep Mode Button
7. Set Timer Button: ON/OFF
8. Set Temperature Button
9. Adjust Temp/Timer: Up/Down Button
10. Quick 1 HR OFF Button
11. Turbo(Arctic) Quick Cooling Button
12. Fan Speed Button: High/Medium/Low/Auto


# TRANSMITTER FEATURES

**Transmitter Features - Various keys & the function associated with them are as follows :**






- POWER** : To switch the system on or off.
- UP** : Used for incrementing the preset temperature or timer time.
- DOWN** : Used for decrementing the preset temperature or timer time.
- FAN SPEED** : To change fan speed.
- SLEEP** : This Key set/cancel the Sleep function.
- SWING** : Used for turning swing motor on/off
- 1HR. OFF** : To set 1hr off timer.
- TURBO** : To active Turbo feature, press this key.
- MODE** : To change mode.
- TIMER** : Used to set timer. Timer value can be changed by pressing up/down key after pressing timer key.
- ENERGY SAVER** : To active/deactivate energy saver function (In cool mode only).
- TEMP** : To change/set preset temperature.

# INTRODUCTION FOR BUTTONS ON REMOTE CONTROLLER


## Switching ON/OFF

Remote Control	Operation
ON / OFF  POWER	<ol style="list-style-type: none"> <li>To start the operation of the unit press the POWER button</li> <li>To stop the operation of the unit, press the POWER button again.</li> </ol>

## Adjusting Operation Mode


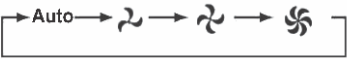



Remote Control	Operation
MODE 	<div style="display: flex; align-items: center;">  <div style="margin-left: 20px;"> <p>Using this button, Cool, Dry and Fan mode can be selected cyclically.</p> <ul style="list-style-type: none"> <li><b>COOL MODE</b> - "Cl" will appear at display of air conditioner for 5 sec after that set temp will display. Temp and Fan speed vary, all keys are functional.</li> <li><b>DRY MODE</b> - "dr" will appear at air conditioner display for 5 sec. Fan speed will be auto in this mode &amp; temperature will vary. Turbo &amp; Energy saver not applicable in this mode.</li> <li><b>FAN MODE</b> - "Fn" will appear at the display of air conditioner. Fan speed variable. Turbo &amp; Energy saver not applicable in this mode.</li> </ul> <p>Note :- In COOL, DRY mode (Cooling modes), If the unit is turned OFF and turned ON by remote, default 24°C set temperature will be automatically selected by remote &amp; corresponding function will be transmitted from the remote after turning ON If previous set temperature is between 16°C to 23°C, after switching OFF the unit by remote, set temperature will be set to default 24°C when unit is turned ON by remote. If previous set temperature is equal or above 24°C, after switching OFF the unit by remote, set temperature remains unchanged when unit is turned ON by remote.</p> <p><b>This will be applicable to all the product manufactured after JAN-2020 as per regulation.</b></p> <div style="display: flex; justify-content: space-around; align-items: center;">  <b>Cool</b>  <b>Dry</b>  <b>Fan</b> </div> </div> </div>
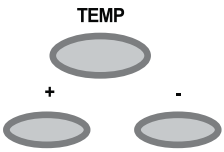
# INTRODUCTION FOR BUTTONS ON REMOTE CONTROLLER


Remote Control	Operation
 <p>The diagram shows three buttons on a remote control. At the top is a button labeled "TEMP". Below it are two buttons: one on the left labeled "+" and one on the right labeled "-".</p>	<p>By pressing these buttons, the temperature setting can be increased or decreased.</p> <p><b>Temperature range for Celsius degree setting:</b> 16°C-30°C. Recommended setting is 24°C.</p>

# INTRODUCTION FOR BUTTONS ON REMOTE CONTROLLER


## Selecting Fan Speed

Remote Control	Operation
 <p>FAN SPEED</p>	<p>Using this button, Auto, Low, Medium and High fan speed can be cyclically selected. Operate Auto in cool mode the fan speed will be selected automatically to Low, Medium or High.</p>  <p>  Low fan       Medium fan   High fan      Auto         </p>

## Adjusting Airflow Direction

Remote Control	Operation
 <p>SWING</p>	<p>Press the swing button to select Air Swing. The vertical louvers start to rotate for better air flow and distribution around the room.</p> <p>Press the swing button again to stop Air Swing function.</p> <p>Note: Using your hands to adjust the direction of the louvers may cause them to malfunction. If this happens, stop operation immediately and restart.</p>




## Energy Saver Operation

Remote Control	Operation
 <p>ENERGY SAVER</p>	<p>Energy Saver function can be selected in Cool Mode only. "ES" is displayed on the AC Control Panel when Energy Saver is set.</p> <p>Set Temp becomes 24°C and Fan Speed becomes Low and are not changeable.</p> <p>Energy Saver get deactivated on Main Power On/Off or Power fail.</p>


\*Energy Saver mode is only accessible via the Remote Control.




# INTRODUCTION FOR BUTTONS ON REMOTE CONTROLLER

Remote Control	Operation
<p>TIMER</p>  <p>△      ▽</p>  <p>1 HR OFF</p> 	<p>Timer:</p> <p>Press the timer button to set the unit "ON Timer" when the unit is off. Press the timer button to set the unit "OFF Timer" when the unit is in operation.</p> <p>UP and DOWN buttons can be used with Timer buttons to adjust the timer by an interval of 1 hour</p> <p>1 HR OFF:</p> <p>You can set quick "One Hour OFF Timer" by pressing this button. The unit will switch off 1 hour after pressing this button.</p>


## TURBO

Remote Control	Operation
 <p>TURBO</p>	<p>Turbo function can be selected in Cool Mode only.</p> <p>"Set Temperature" will be displayed on the AC Control Panel when Turbo is set.</p> <p>If Set Temp &lt; Room Temperature and the user presses Turbo Key the Fan Speed will become HIGH and the Compressor Delay Time (3 min) will be bypassed and Compressor will switch ON Immediately.</p> <p>If Set Temp &gt; Room Temperature, Turbo can't be set.</p> <p>If you change the Mode or Press ON/OFF key, turbo will get cancelled.</p> <p>*In some models, Turbo function is only accessible via Remote Control.</p>

## Adjusting the Temperature and On -Off Timer

Remote Control	Operation
	<p>UP and DOWN buttons can be used with Temp and Timer buttons to adjust the temperature setting of the unit by an interval of 1°C or timer by an interval of 1 hour.</p>

## SLEEP Mode

Remote Control	Operation
 <p>SLEEP</p>	<p>Press this button to select "Sleep On" or "Sleep Off". At power on, Sleep Off is the default. When Sleep function is set, the Sleep signal will be displayed on the unit. It is possible to set the timer in Sleep mode. Sleep mode is not available under Fan or Auto modes. When the unit is turned off, the Sleep function is cancelled. In this mode the set temperature increases automatically by 1°C every hour for next 2 hours.</p> <p>"SL" is displayed on the Control Panel for 5 sec in every min.</p> <p>*In some models, Sleep function is only accessible via Remote Control.</p>

## DEVICE PROTECTION MEASURES

### **Room sensor failure/ missing:**

'E1' blinks on Display and Compressor runs in cycle as 20min 'ON' and followed by 7min 'OFF'.

### **Coil sensor failure/missing:**

'E2' blinks on Display and Compressor runs in cycle as 20min 'ON' and followed by 7min 'OFF'.

### **Protecting the Compressor**

"Time Delay" is incorporated into the circuit. This ensures that once compressor is switched off, there is a delay time of 3 minutes before restart. If Turbo mode is active, the 3 minutes delay time is bypassed for the first time.

"DF" blinks on display when the indoor unit coil temperature reaches 1°C or below for 1 minute, the compressor stops immediately and the fan runs at low speed. As soon as the indoor unit coil temperature reaches 12°C or above, the compressor starts according to the room temperature (with a 3 minutes delay)

## TIPS FOR COMFORT AND ECONOMY

### **Do not overcool the room:**

This is not good for health and wastes electricity.

### **Keep blinds or curtains closed:**

Do not let direct sunshine enter the room when the air conditioner is in operation.

### **Keep room temperature uniform:**

Adjust vertical and horizontal airflow directions to ensure uniform temperature in the room.

### **Make sure that the doors and windows are closed:**

Avoid opening doors and windows as much as possible to ensure effective air conditioning in the room.

### **Clean the air filter regularly:**

Blockages in the air filter reduce dehumidifying effects. Clean the air filter at least once every two weeks.

### **Ventilate the room occasionally:**

Since windows are kept closed, it is a good idea to open them and ventilate the room periodically. When starting the unit, curtains and windows should be closed to prevent loss of cooling.


# INSTALLATION INSTRUCTIONS

**Note:** If wall thickness obstructs unit's side vents, make wall opening wider as shown in Figure. If outside wall projects beyond back of unit, use baffles on casing's rear corner, See Figure for minimum dimension requirements and placement of baffles.


Cabinet should be installed with an outward slope equal to one half bubble on a carpenter's level or as per above. Otherwise water will drip even in normal humidity.

**Note:** Front of cabinet must project at least 1/2 inch into room to assure proper fit to grill's frame to unit.


1. Remove the chassis locking screw  
Unscrew the chassis lock from the side of the outer Wrapper.
2. Slide the chassis out from the outer wrapper.
3. Fix the outer wrapper at the frame.  
Place the wrapper on the hole and fix with the appropriate screws.
4. Fixing of rear drain  
Before slide the machine into the wrapper fix the drain back with rubber washer supplied with machine, at the back wall of Base pan  
Press hard to ensure the drain is locked properly

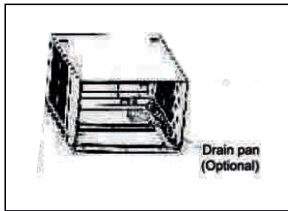


5. This optional drain pan is needed if condensate is to be discharged completely and is available through service.

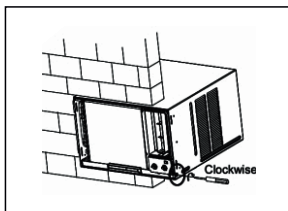

7. Lock the chassis to the outer wrapper reusing the screw.

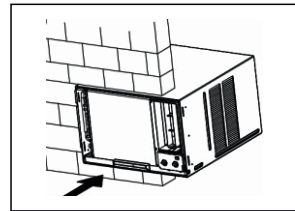

6. Slide the chassis back into the outer wrapper.

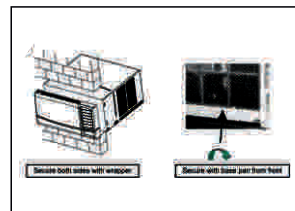

8. Attach the front grille to the outer wrapper

## OPERATION TIPS & PRECAUTIONS

- Keep blinds or curtains closed.
- Do not let direct sunlight enter the room when the air conditioner is in cooling operation.
- Ventilate the room occasionally. Since windows are kept closed, it is a good idea to open them and ventilate the room now and then.
- Restriction of air intake and outlet vents. This causes lowered performance and irregular operation.
- Doors and windows must be shut tight. Avoid frequent opening of the doors and windows to keep cool air or the warm air in the room.
- Do not use the air conditioner for purposes other than cooling the room.
- Do not use the air conditioner for drying clothes and other such purposes.
- Do not pull out the power cord. Damaged cord may cause serious electrical shocks.
- Do not use heating instruments in the vicinity .
- Take care to adjust the temperature to suit the conditions.
- Select the most suitable temperature. The air conditioner's plastic parts may melt if exposed to excessive heat.

## CARE AND MAINTENANCE

### Cleaning the Unit:

1. Turn off power before cleaning.
2. Use soft cloth while cleaning the cabinet. If the cabinet is very dirty, dip cloth into warm water below 40°C. The air filter behind the intake grille should be washed at least once every two weeks, or as often as it needs cleaning.
3. Do not use gas, benzene, solvent, chemical solvent, etc. for cleaning.
4. Do not splash water directly on the indoor unit, as it may damage the microcomputer or circuit plate.

### Air Filter:

As mentioned, the air filter behind the intake grille should be washed at least once every two weeks, or as often as it needs cleaning.

### **Cleaning the Air Filter:**

1. To remove the air intake grille, grasp the tab on the filter and pull to take out.
2. Vacuum clean the filter on the dusty side to remove light dust.
3. Wash the filter, cleaner side up, under gently flowing water to wash out accumulated dust and lint.
4. If the filter is very dirty, use a mild household detergent in the wash water. Let the filter dry thoroughly before reinstalling it. If necessary, please ask professional personnel to clean it.
5. Check if air inlet and outlet of outdoor unit are blocked.

### **Don't's:**

1. Do not use gasoline, benzene, thinner or other chemicals as they cause the paint to peel or cause harm to plastic parts.
2. Avoid pouring water directly to the Unit for cleaning. It may cause electrical hazard.

## **BEFORE CALLING THE SERVICE ENGINEER**

### **CHECK THE FOLLOWING POINTS BEFORE REQUESTING FOR REPAIRS OR SERVICE**

#### **IF AIR CONDITIONER DOES NOT COOL EFFECTIVELY:**

- Is the air intake and outlet vents on the rear side of the unit (outdoors) blocked?
- Doors and windows are open
- Water heater or cooking stove is used in the room
- Is the air intake and outlet vents on the front side of the Unit (Indoor) blocked?
- Too many people in the room
- Air filter is clogged with dust
- The thermostat control switch may not be adjusted properly
- Is the air conditioner set for ventilation

#### **IF AIR CONDITIONING IS NOT FUNCTIONING:**

- Check if power is cut off
- Check if fuse is blown

# TROUBLESHOOTING

Problem	Possible Causes	What To Do						
Air conditioner does not start	<ol style="list-style-type: none"> <li>1. Blown Fuse</li> <li>2. Circuit Breaker tripped</li> <li>3. Unit cord unplugged</li> <li>4. Supply voltage too low</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace only once*.</li> <li>2. Reset only once*.</li> <li>3. Replug into wall receptacle.</li> <li>4. Consult electrician.</li> </ol>						
Air conditioner does not cool as it should	<ol style="list-style-type: none"> <li>1. Air filter dirty</li> <li>2. Improper thermostat setting</li> <li>3. Unit on sleep mode</li> <li>4. Unit on dry mode</li> <li>5. Check if the unit is exposed to the sunlight</li> </ol>	<ol style="list-style-type: none"> <li>1. Clean the air filter.</li> <li>2. Reset to desired temperature setting.</li> <li>3. Press cool button.</li> <li>4. Press sleep button.</li> <li>5. Provide an awning.</li> </ol>						
Fan motor does not run	<ol style="list-style-type: none"> <li>1. Check whether fan hitting cowling or foreign material</li> <li>2. Check fan motor bearing</li> </ol>	<ol style="list-style-type: none"> <li>1. Adjust fan position or remove the foreign material.</li> <li>2. Replace fan motor.</li> </ol>						
Excessive noise	<ol style="list-style-type: none"> <li>1. Check unit installation</li> <li>2. Check whether fan hitting the orifice or foreign material</li> <li>3. Mounting screws are loose</li> </ol>	<ol style="list-style-type: none"> <li>1. Re-install if necessary.</li> <li>2. Adjust fan position or remove the foreign material.</li> <li>3. Tighten mounting screws.</li> </ol>						
Ice or frost forms on indoor coil	<ol style="list-style-type: none"> <li>1. Low outside temperature</li> <li>2. Air filter dirty</li> <li>3. Check system for leak</li> </ol>	<ol style="list-style-type: none"> <li>1. Operate the Fan without cooling until the frost disappears.</li> <li>2. Clean the air filter.</li> <li>3. Repair and recharge.</li> </ol>						
Water dripping into the room	<ol style="list-style-type: none"> <li>1. Outer wrapper not tilted properly on the outside.</li> <li>2. Drain hole clogged.</li> </ol>	<ol style="list-style-type: none"> <li>1. Tilt the outer wrapper by 10mm wax.</li> <li>2. Clean drain hole.</li> </ol>						
Control panel error code	<table border="0"> <tr> <td>E1</td> <td>1. Room Sensor failure (Short or Open).</td> </tr> <tr> <td>E2</td> <td>2. Coil Sensor failure (Short or Open).</td> </tr> <tr> <td>dF</td> <td>3. To indicate Defrost error.</td> </tr> </table>	E1	1. Room Sensor failure (Short or Open).	E2	2. Coil Sensor failure (Short or Open).	dF	3. To indicate Defrost error.	
E1	1. Room Sensor failure (Short or Open).							
E2	2. Coil Sensor failure (Short or Open).							
dF	3. To indicate Defrost error.							

\* If fuse blows or circuit breaker trips a second time, do not attempt to start unit again.

\*\*Contact your indcool dealer for assistance, if the problem is not fixed.

\*\*\* Applicable for WINDOW AC models with R32 refrigerant.

# WARRANTY CARD

## E - waste

Information on hazardous constituents as specified in sub-rule 1 of rule 16 (1) in electrical and electronic equipment.

Declaration of Conformity with the requirements of the E-Waste (Management) Amendment Rules 2018 with the rule 16 (1) limits with respect to Lead, Mercury, Cadmium, Hexavalent chromium, Polybrominated biphenyls, Polybrominated diphenyl ethers.

The content of hazardous substance with the exemption of the applications listed in SCHEDULE II of the E-Waste (Management) Amendment Rules 2018 :

1. Lead (Pb) – not over 0.1% by weight;
2. Cadmium (Cd) – not over 0.01% by weight;
3. Mercury (Hg) – not over 0.1% by weight;
4. Hexavalent chromium (Cr6+) – not over 0.1% by weight;
5. Polybrominated biphenyls (PBBs) – not over 0.1% by weight;
6. Polybrominated diphenyl ethers (PBDEs) – not over 0.1% by weight.



For the purpose of recycling to facilitate effective utilization of resources, please return this product to a nearby authorized collection center, registered dismantler or recycler, or service center when disposing of this product.

INDcool Customer Care : 01204977980, 1800119515

INDcool WebSite: for information on E-waste collection: [www.INDcool.in](http://www.INDcool.in)

Do's & Don't: E-waste (Management ) Amendment Rules 2018		
S.No.	Do's	Don't
1.	All electrical and electronic products are required to be handed over only to the Authorized recycler.	The product should not be opened by the User himself / herself, but only by authorized service personnel.
2.	The product should be handed over only to authorized recycler for disposal.	The product is not meant for re-sale to any unauthorized agencies / scrap dealer / kabari-walas.
3.	Keep the product in isolated area, after it becomes non-functional / un-repairable so as to prevent its accidental breakage.	The product is not meant for mixing into household waste stream.
4.	Refer to Operating Instructions for handling of end of life products.	Do not keep any replaced spare part(s) from the product in exposed area.
5.	Always dispose products that have reached end-of life at Authorized Service Centre.	Do not donate old electronic items to any body. Do not dispose your product in garbage bins along with municipal waste that ultimately reaches landfill.
6.	Wherever possible or as instructed, separate the packaging material according to responsible waste disposal options and sorting for recycling.	Do not give e-waste to informal and unorganized sectors like Local Scrap Dealer / Rag Pickers.

**INDcoolCustomer Care**  
**INDcool Electrical Pvt. Ltd.**  
**B-10, Media Village, Palash Estate, Phi-4 Greater Noida 201301 (UP)**  
**WebSite: [www.INDcool.in](http://www.INDcool.in) E-mail: [careINDcool@gmail.com](mailto:careINDcool@gmail.com)**  
**Customer Care : 9213945441, 01204977980**  
**Toll Free : 1800119515**